

TESTING ON THE CAR (fig. 9)

- With engine cold, check that the enriching device lever is in the raised position.
- Remove the water temperature gauge sending unit from the engine water outlet connector and fit thermometer 8095800 to its place.
- Check that the thermometer indicates a temperature of 20 deg. C (68 deg. F) and, by means of a sliding caliper or of a suitable tool, measure distance X.
- Heat the cooling water up to a temperature of 80 deg.C (176 deg.F) and measure distance Y.