

RHD CAR WIRING DIAGRAM

(on cars intended for countries where the fitting of hazard signalling is required)

1. Low beam
2. Front side light
3. Main beam
4. Plug-in junction
5. Air horns
6. Coolant radiator electro-fan
7. Coolant radiator electro-fan circuit fuse
8. Coolant radiator electro-fan control thermostat
9. Coolant radiator electro-fan control solenoid switch
10. Two-outlets junction block
11. Front turn indicator
12. Carburettor choke warning light switch
13. Voltage regulator
14. Alternator
15. Starter motor
16. Battery
17. Carburettor fast idling control solenoid
18. Turn indicator repeater
19. Oil pressure gauge transmitter
20. Coolant temperature gauge transmitter
21. Brake fluid low level warning light switch
22. Ignition distributor
23. Ignition coil
24. Fast idling control press-switch on gearbox
25. Fast idling control press-switch on clutch
26. Two-speed windscreen wiper motor
27. Engine compartment light and press-switch
28. Ventilation and heating fan two-speed motor
29. Main beam headlamp fuse (16 A)
30. Six-outlets junction block
31. Fuse box
32. Low beam solenoid switch
33. Outside lamps solenoid switch
34. Horns solenoid switch
35. Main beam headlamp solenoid switch
36. Hazard signalling system fuse (16 A)
37. Main beam solenoid switch
38. Instruments light switch with rheostat
39. Hazard signalling light flasher
40. Instruments panel inner light
41. Instrument light
42. Fuel gauge with reserve warning light
43. Coolant temperature gauge
44. Oil pressure gauge

45. Electronic revolution counter
46. Hazard signalling change-over switch with warning light
47. Electric clock with light
48. Instruments cluster eight-outlets junction block (white)
49. Left-hand turn indicator warning light
50. Main beam warning light
51. Handbrake and brake fluid low level warning light (flashing)
52. Alternator warning light
53. Side lights warning light
54. Right-hand turn indicator warning light
55. Carburettor choke warning light
56. Instruments cluster eight-outlets junction block (red)
57. Four-outlets junction block (white)
58. Cigarette lighter fuse
59. Main beam headlamp switch with warning light
60. Windscreen washer motor
61. Cigarette lighter with light
62. Handbrake and brake fluid low level warning light flasher
63. Turn indicators flasher
64. Key switch for ignition, services, anti-theft device
65. Rear heated window switch
66. Air ventilation and heating fan motor switch
67. Plug-in socket
68. Four-outlets junction block (red)
69. Side lights, low beam and main beam control
70. Turn indicators and low beam flashing control
71. Air horns control
72. Two-speed windscreen wiper motor and washer control
73. Handbrake warning light switch
74. Stop light switch
75. Reversing light press-switch
76. Rear heated window filament
77. Door safety light
78. Courtesy light door operated press-switch
79. Courtesy light
80. Luggage compartment light switch
81. Luggage compartment light
82. Fuel gauge sending unit
83. Rear turn indicator
84. Rear-side light
85. Reversing light
86. Stop lights
87. Number plate light

Bianco = White
Blu = Blue
Giallo = Yellow

Grigio = Grey
Marrone = Brown
Nocciola = Hazel

Nero = Black
Rosso = Red
Verde = Green